

STB SETUP PROCEDURE

ABV Neptune 1400C

HOW TO FACTORY SETTING

1. Press **menu** on RCA remote control, select **Tools**→**Factory Setting** and press **OK** button



2. Click **YES** and this operation is started



3. Press **exit** on RCA remote control

STB SETUP PROCEDURE

ABV Neptune 1400C

HOW TO SETUP PARAMETER OF ABS-2A SMV FreeViewSat FROM STB MENU

1. Press **menu** button on RCA remote control and select **Installation** → **TP List** and press **OK** button



2. Press green button on RCA remote control and input parameter as below and click **Save**



3. Press **exit** button on RCA remote control

STB SETUP PROCEDURE

ABV Neptune 1400C

4. Press **menu** button on RCA remote control and select **Installation** → **Antenna Setup** and fill the parameters as below



5. Press **exit** button on RCA remote control
6. Press **menu** button on RCA remote control and select **Installation** → **TP List** and press **OK** button


STB SETUP PROCEDURE

ABV Neptune 1400C

7. Select list the frequency number of 12290 MHz and press **blue** button on RCA remote control



8. Click **OK** and STB starts to scan channels

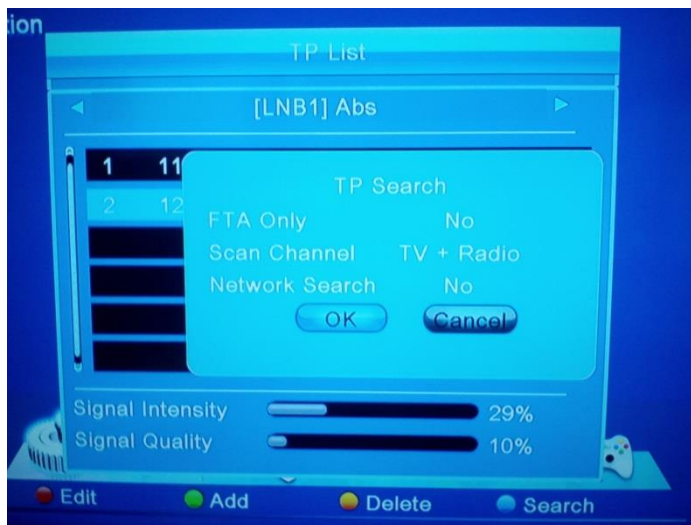

9. Click **YES** and press **exit** button on RCA remote control